

INSTALLATION GUIDE

IG-0028-00 1.8 en-US
Publication date 31/07/2025



Important User Information

Disclaimer

The information in this document is for informational purposes only. Please inform HMS Networks of any inaccuracies or omissions found in this document. HMS Networks disclaims any responsibility or liability for any errors that may appear in this document.

HMS Networks reserves the right to modify its products in line with its policy of continuous product development. The information in this document shall therefore not be construed as a commitment on the part of HMS Networks and is subject to change without notice. HMS Networks makes no commitment to update or keep current the information in this document.

The data, examples and illustrations found in this document are included for illustrative purposes and are only intended to help improve understanding of the functionality and handling of the product. In view of the wide range of possible applications of the product, and because of the many variables and requirements associated with any particular implementation, HMS Networks cannot assume responsibility or liability for actual use based on the data, examples or illustrations included in this document nor for any damages incurred during installation of the product. Those responsible for the use of the product must acquire sufficient knowledge in order to ensure that the product is used correctly in their specific application and that the application meets all performance and safety requirements including any applicable laws, regulations, codes and standards. Further, HMS Networks will under no circumstances assume liability or responsibility for any problems that may arise as a result from the use of undocumented features or functional side effects found outside the documented scope of the product. The effects caused by any direct or indirect use of such aspects of the product are undefined and may include e.g. compatibility issues and stability issues.

Table of Contents

1. Preface	1
1.1. About This Document	1
1.2. Document history	1
1.3. Related Documents	1
1.4. Trademark Information	1
2. Product Summary	2
2.1. Introduction	2
2.2. Modular Concept of the	2
2.2.1.	3
2.2.2. Extension Cards Details	3
2.3. Features of the	3
2.4. General Specification of the Hardware Platform	4
2.5. Typical applications	4
2.6. Part Numbers	4
3. Safety, Environmental and Regulatory Information	5
3.1. Scope	5
3.2. Power Supply	5
3.3. ESD Damage Prevention	5
3.4. Applicable Directives, Standards and Compliance	5
3.4.1. Conformity to European Directives	5
3.4.2. Applicable Safety Standards	6
3.4.3. FCC Compliance	6
3.4.4. Certifications	6
3.5. Reference Standards for Type Tests	6
3.5.1. Mounting Recommendations	6
3.5.2. Earthing	8
3.5.3. Environmental Limits	8
3.5.4. Label	8
3.6. Hazardous Locations - Class 1 Division 2	9
3.7. Internal Battery	11
3.8. Field Implementation & Environmental Conditions	11
3.8.1. Mandatory Cybersecurity Requirements	11
3.8.2. Ingress Protection	11
3.8.3. Mounting Recommendations	11
3.8.4. Earthing	13
3.8.5. Environmental Limits	13
3.8.6. Labelling Information	13
4. Hardware Description	15
4.1. Label	15
4.2. Mechanical Dimensions	16
4.3. Physical Interface	17
4.3.1. LED Panel	17
4.3.2. Reset Button	18
4.3.3. SD Card Slot	18
4.3.4. Main Connector of	18
4.3.5. Two Slots for Extensions	18
4.3.6. LAN / WAN Ethernet ports	19
5. Extension Cards	20

5.1. Slot Compatibility	22
5.2. Extension Card Insertion	23
5.3. Powering On the with its Extension Cards	24
5.4. Multiple Extension Cards	24
5.4.1. Detection Order	24
5.4.2. Software Compatibility of Multiple Cards Combination	25
5.5. Ethernet Extension Card - FLX 3101	25
6. IP Address & Access to the Web Configuration	27
6.1. Factory Default IP Settings	27
6.2. Powering On	27
6.3. Connecting to the LAN IP Address	27
6.4. Web Interface	28
6.4.1. Detected Cards Displayed in the System Page	29
6.5. Installation and Firmware Update for Cybersecurity Requirements	29
6.6. Network Interfaces and Services (Factory Default State)	29
7. Resetting the	31
7.1. Normal Boot Sequence	31
7.2. First Level Reset (User Reset)	31
7.3. Second Level Reset (Factory Reset)	31
7.4. Reset Impact Matrix	32
Appendix A. Appendix	33
1. Connector Pinout & Related Specifications	33
1.1. Main Connector	33
1.2. Specification of the External Power Supply	33
1.3. Digital Output & Digital Inputs	34
2. Ewon® Flexy Products Overview	35
2.1. Extension Cards	36
3. Ewon® Flexy Isolation Scheme	38
3.1. Base Unit	38
3.2. Listing of Extension Cards	39

1. Preface

1.1. About This Document

1.2. Document history

Version	Date	Description
1.0	2018-01-12	Official release
1.1	2018-11-06	Changed: Ewon® Flexy label
1.2	2019-01-29	Changed: general review
1.3	2019-08-20	Changed: Safety, Environmental and Regulatory Information (page 5)
1.4	2020-01-02	Changed: Digital Output & Digital Inputs (page 34)
1.5	2022-08-02	Changed: product images & logos, adding missing extension cards, update isolation scheme
1.6	2023-04-17	Changed: Cerifications DK, EIC, UK,
1.7	2024-03-01	Added: Hazardous Locations - Class1 Div2 (page 9) chapter
1.8	2024-09-10	Added: New password policy from device serial number 2427-0908-24.

1.3. Related Documents

Document	Author	Document ID
Easy Commissioning via SD Card & USB Drive	HMS	AUG-0062-00
Ebuddy	HMS	AUG-0063-00
Reference Guide for	HMS	RG-0008-00

1.4. Trademark Information

Ewon® is a registered trademark of HMS Industrial Networks SA. All other trademarks mentioned in this document are the property of their respective holders.

2. Product Summary

2.1. Introduction

The is a modular industrial M2M router.

It has been designed to fulfill the following key requirements:

- Flexible WAN, allowing within the same product to address different Internet connectivity technologies (Ethernet, WiFi, 4G,...) and securing the investment in case of technology upgrade (eg. 3G > 4G).
- Flexible Field, providing easy connection to a wide range of external devices, including various field protocols.
- Flexible Apps, embedding alarms, data logging, remote access, routing and web HMI applications with mouse click based configuration but also customization offering openness and programming tools.



TIP

The is fully compatible with the [Talk2m cloud connectivity services](#) and with the **Anybus Defender** as an OpenVPN Server. Read our knowledge base article [Can I use the Anybus defender as an OpenVPN Server for my Ewon Flexy/Cosy131 devices ?](#).



Figure 1. Housing of the Ewon® Flexy

2.2. Modular Concept of the

As the name suggests, it has been designed to enable numerous and various combinations by addition of extension cards.

More information can be found in the [Listing of Extension Cards \(page 39\)](#) appendix.



Fig. 2 Modular Concept of the Ewon® Flexy

1	Main connector including power input terminals (1 DO and 2 DIs)
2	Communication interface
3	Placeholder for extension cards

2.2.1.

The features:

- 2 DIs and 1 DO.
- 2 free slots allowing the insertion of extension cards.

2.2.2. Extension Cards Details

The extension cards extend the communication features by adding either:

- A WAN communication interface (Ethernet WAN, wireless modem, ...)
- A field communication interface (serial, IO card, ...)

How the extension cards should be integrated in the is explained in the [Extension Cards \(page 20\)](#) chapter.

2.3. Features of the

The following section lists the different main features supported by the .

- Open VPN
- Talk2m connections
- Data acquisition protocols (IO Servers)
- Alarm management and notification
- Data logging
- BASIC scripting
- JAVA ETK
- Web server
- ViewON 4 Web HMI
- FTP client and server
- HTTP(S) client (Get & Post requests)
- Ethernet to Serial gateway
- Routing between Ethernet interfaces (WAN to LAN)
- Routing features: IP forwarding, NAT, Port forwarding

2.4. General Specification of the Hardware Platform

Characteristic	Value
Design	Industrial design (24 VDC power supply, DIN Rail mounting, extended temperature)
Processor	ARM9
Clock	Real Time Clock (RTC) with battery backup Expected lifetime: 10 years
Ethernet Interface	4 configurable LAN/WAN Ethernet ports 10/100 Mbps
Digital Input	2
Digital Output	1
Mounting	Latch for DIN rail EN50022 compliant

2.5. Typical applications

Some of the typical applications for the are the following ones:

- Remote access of Ethernet, serial and MPI devices
- Industrial VPN router
- Remote monitoring

2.6. Part Numbers

Available Part Numbers		
Part Number	Type	Description
FLEXY20500_00MA	Ewon® Flexy	M2M Data Gateway – 4 Ethernet ports
FLEXY20500_00MAH	Ewon® Flexy	M2M Data Gateway – 4 Ethernet ports for use in hazardous locations C1D2. More in info in Hazardous Locations - Class 1 Division 2 (page 9) chapter.



NOTICE

In the above table, the **MA** extension stands for **Multiple language A** (regrouping EN, FR, DE and IT). The part number syntax is explained in the [Label \(page 8\)](#).

3. Safety, Environmental and Regulatory Information

3.1. Scope

The present section addresses safety, environmental and regulatory information for the .

This safety, environmental and regulatory information generally has a similar compliance frame but some aspects differ. For example: in the case of telecommunication extension cards, additional directives, standards and instructions apply.

3.2. Power Supply

The external power supply is a third party device that is not part of this certification.

- EUT should be supplied from external, separately provided power supply 12-24Vdc, 30W min., certified for 70°C and for altitudes up to 2000m.
- Power supply should be separately certified according UL/IEC 62368-1 with ES1, PS2 output or separately certified according to IEC/UL60950-1 with LPS output or Class2 per NEC.

For more information, check the [Certifications](#) section of our website or refer to [Specification of the External Power Supply \(page 33\)](#).

3.3. ESD Damage Prevention

To avoid possible damage to the base unit and / or extension card, please wait 30 seconds after switching off the equipment before inserting (or removing) an extension card.



IMPORTANT

Always use ESD precautions when handling extension cards and / or opened base unit as they contain parts and assemblies susceptible to be damaged by electrostatic discharge (ESD).

The printed circuit boards (PCBs) of the described in the present document are partially exposed when slot fillers are removed to place extension cards. In order to avoid ESD damage, the product, when it is opened, must be handled with the necessary precaution including:

- Grounded ESD functional work surface
- Personal grounding
- Verification that the configuration is compatible with the firmware capabilities before being operated.

The extension cards described in this document are modules exposing both sides of an electronic printed circuit board.

Therefore, they are packed in anti static ESD bags. In order to avoid ESD damage, the product must be handled with the necessary precaution as described above.

3.4. Applicable Directives, Standards and Compliance

The belongs to class A Information Technology Equipment (ITE). In a domestic environment, this product may cause radio interference in which case the user might have to take appropriate measures.

3.4.1. Conformity to European Directives

The and its extension cards are in conformity with the following EC directives:

- RoHS Directive 2011/65/EU
- EMC Directive 2014/30/EU
- RE Directive 2014/53/EU (1)

(1): When applicable, the product conforms to the corresponding RE Directive articles: RF spectrum efficiency: Art 3(2); EMC: Art. 3 (1)(b); Safety: Art. (3)(1)(a)

3.4.2. Applicable Safety Standards

The and its extension cards are in conformity with the required safety standards.

These safety documentation can be downloaded on the [Certifications](#) section of our Ewon Support website.

3.4.3. FCC Compliance

The and its extension cards comply with Part 15 of the FCC Rules. Operating is subject to the following two conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation.

3.4.4. Certifications

The has been certified by authorized bodies.

These certificates can be downloaded as PDF files on the [Certifications](#) section of our Ewon Support website.

3.5. Reference Standards for Type Tests

The Ewon Ewon® Flexy and their extension cards have been fully validated on temperature, vibration and shock against the requirements of the following standards:

Operating & Storage Temperature:

Test nature	Reference Standard
Cold test	IEC 60068-2-1
Dry heat test	IEC 60068-2-2
Temperature change test	IEC 60068-2-14
Cyclic damp heat test	IEC 60068-2-30

Vibration & Shock Tests:

Test nature	Reference Standard
Vibration test (sinusoidal)	IEC 60068-2-6
Vibration test (broad-band random)	IEC 60068-2-64
Shock test	IEC60068-2-27

3.5.1. Mounting Recommendations

The product is intended to be mounted vertically, label on the right side.


The normal mounting position of the is wall mounted on a horizontal [Omega type DIN-rail \(EN 50022\)](#).

• **Mounting the unit on DIN-rail:**

Pull the slide lock (located at the bottom of the back-side of the unit) downwards and present the unit in front of the DIN rail. Tilt the Ewon upwards in order to hang it on the upper edge of the DIN rail by its hook. Gently tilt the unit downwards until it finds its original position. Pull the slide lock upwards to fix and lock the unit on the DIN rail.


• **Removing the unit from DIN-rail:**

Release the unit by pulling the slide lock downwards while gently tilting the unit upwards. Free the unit by unhooking it from the upper rail edge.

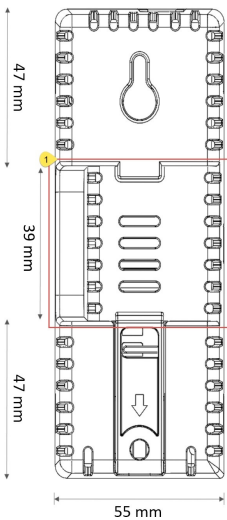

DIN rail mounting position

#	Description
1	DIN rail mounting bracket

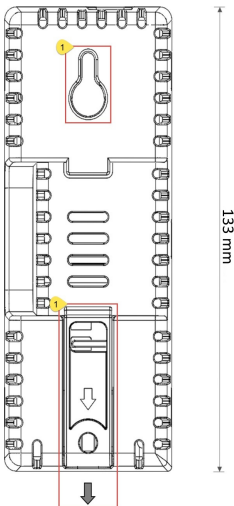


Wall mounting position

#	Description
1	Wall mounting bracket (suggested screw dimensions 4,2 x 32 mm)

To ensure a proper ventilation of the equipment, a free gap of at least 2 cm must be respected in front of all upper & lower ventilation openings of the unit.

A free gap of at least 1 cm must be respected on each side of the unit.

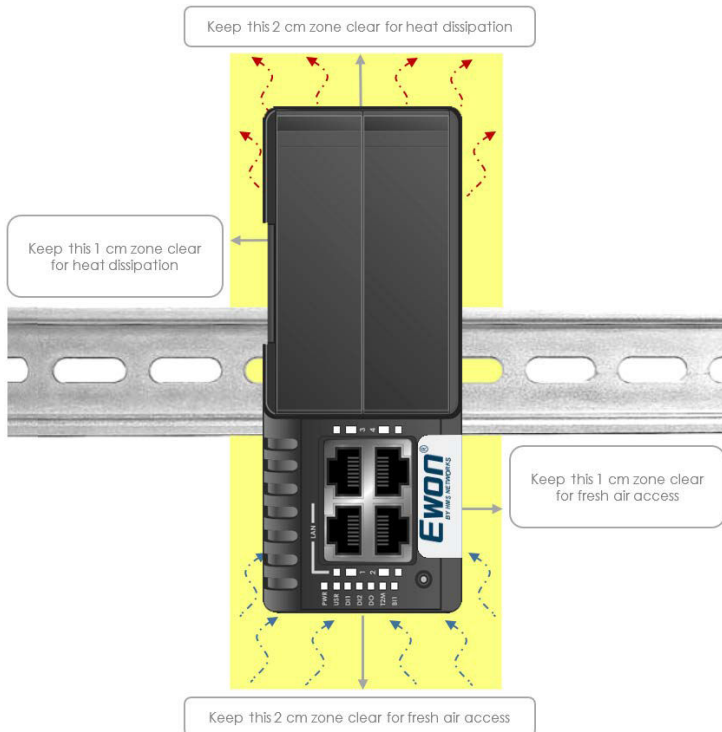

Free gap surrounding the Ewon for heat dissipation.

3.5.2. Earthing

Earthing the Ewon is necessary to eliminate unwanted transients and to conform to the EMC requirements. Therefore, a functional earth (FE) terminal is available on the main connector as shown in [Specification of the External Power Supply \(page 33\)](#).

Connect this terminal directly to allow impedance ground. Shielded cables have to be used for Ethernet and USB to comply with the EMC requirements.


3.5.3. Environmental Limits

The equipment will operate properly within the following environmental limits provided it is mounted according to [Mounting Recommendations \(page 6\)](#).

Characteristic	Value
Operating temperature	-25° to +60°C
Storage temperature	-40° to +70°C
Relative humidity	10 to 95% non-condensing
Operating altitude	Up to maximum 2000m
Storage altitude	Up to maximum 3000m
Mounting	Latch for DIN rail EN50022-compliant

3.5.4. Label

The identification label of the is placed on the right hand side of the housing. The different parts of the label are described below:

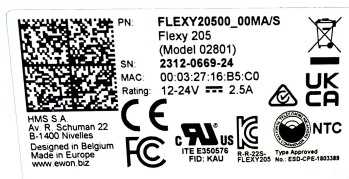

Label	Definition
PN	Part Number (see syntax in the table below)
SN	Serial Number YYWW-SSSS-PP YY = 2 last digits of production year WW = production week number SSSS = Sequential production number PP = Product Code
MAC	MAC address of the Ethernet adapter
Rating	Power supply requirements
Marks	CE, UL,... logos if applicable

Syntax of the Part Number:

FLEXY12233_44AA [suffix]			
Position(s)	Description	Acceptable values	
FLEXY	Name of the Ewon device model	Only Flexy (constant)	
1	Single figure Defines routing capabilities	2	M2M Router
22	Two figures Defines the type of the motherboard	05	4 configurable LAN/WAN Ethernet ports
33	Two figures Defines the primary software option	00	No primary software option
44	Two figures Defines the secondary software option	00	No secondary software option
AA	Two capital letters Defines the firmware language	MA	EN + FR + DE + IT
[suffix]= /S	Single capital letters Defines the model type	S	This suffix indicates compliance with the UL/IEC/EN 62368-1 standard.
[suffix]= H	Single capital letters Defines the model type	H	This suffix indicates compliance with the UL 121201, 9th Ed., and CSA C22.2 NO. 213-17, 3rd Ed., for usage in Hazardous Locations, Class 1, division 2.

Marks	
Marks	Description
	Conformité Européenne or European Conformity (EC)
	UL Recognized - Underwriters Laboratories

3.6. Hazardous Locations - Class 1 Division 2

This chapter concerns the FLEXY20500_00MAH device.



"H" stands for **HazLoc** (*Hazardous Locations* as opposed to *OrdLoc* - *Ordinary Location*) and refers to **Class 1 Division 2** area.

The FLEXY20500_00MAH has the same features as the (FLEXY20500_00MA) except it received official certification to be placed and used in a Class 1 Division 2 area.

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D OR non-hazardous locations only.




WARNING

EXPLOSION HAZARD: Do not disconnect while the circuit is live or unless the area is free of ignitable concentrations.

To ensure a proper ventilation of the equipment, a free gap of at least 2 cm must be respected in front of all upper and lower ventilation openings of the unit. A free gap of at least 1 cm must be respected on each side of the unit.

- Where can you place and use the FLEXY20500_00MAH?

The FLEXY20500_00MAH may be used in the yellow area: Class 1, Division 2.

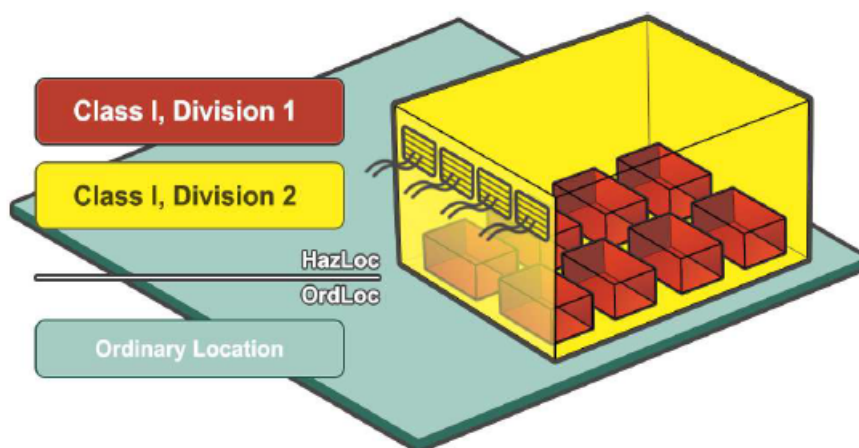

The standard , can only be placed and used in the green area: OrdLoc.



WARNING

None of the variant can be placed in the red zone: Class 1, Division 1!

3.7. Internal Battery

The contains a CR2032 battery. This battery is used to maintain the real time clock up-to-date even when the unit is not powered.

Here is a list of risks and recommendations regarding the battery:

- Risk of explosion if the battery is replaced by an incorrect type. The battery is not intended to be replaced by the consumer: the product shall be returned to the manufacturer for replacement.
- Do not ingest battery, chemical burn hazard.
- Keep new and used batteries away from children.
- If the cell battery is swallowed, it can cause several internal burns in just 2 hours and can lead to death.
- If the equipment's enclosure do not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



IMPORTANT

Risk of explosion if the battery is replaced by an incorrect type. The battery is not intended to be replaced by the consumer: the product shall be returned to the manufacturer for replacement.

3.8. Field Implementation & Environmental Conditions

3.8.1. Mandatory Cybersecurity Requirements



WARNING

To comply with the latest mandatory cybersecurity requirements, please update your Ewon device during installation with the latest available firmware. If your device was running a firmware below 15.0S1, then Reset Level 2 is required after firmware update.

Please ensure that physical access protection to the Ewon device is guaranteed and allow only authorized users to connect to the LAN network.

Additionally, use the available access rights levels on both the Ewon device and in Talk2m to enforce the principle of least privilege.

Make sure strong and unique passwords are used for the Ewon web configuration pages.

Read about the procedure in the following article [How to update the firmware of an Ewon Flexy ?](#).

3.8.2. Ingress Protection

The has an IP20 protection grade. Therefore, the is NOT suited for outdoor mounting. It has to be integrated in an electrical cabinet, protected from excessive heat, humidity and dust. Do not push any sharp object into the air vents or openings of the equipment.

3.8.3. Mounting Recommendations

The product is intended to be mounted vertically, label on the right side.


The normal mounting position of the is wall mounted on a horizontal [Omega type DIN-rail \(EN 50022\)](#).

• **Mounting the unit on DIN-rail:**

Pull the slide lock (located at the bottom of the back-side of the unit) downwards and present the unit in front of the DIN rail. Tilt the Ewon upwards in order to hang it on the upper edge of the DIN rail by its hook. Gently tilt the unit downwards until it finds its original position. Pull the slide lock upwards to fix and lock the unit on the DIN rail.


• **Removing the unit from DIN-rail:**

Release the unit by pulling the slide lock downwards while gently tilting the unit upwards. Free the unit by unhooking it from the upper rail edge.

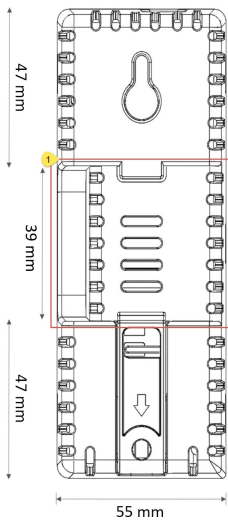

DIN rail mounting position

#	Description
1	DIN rail mounting bracket

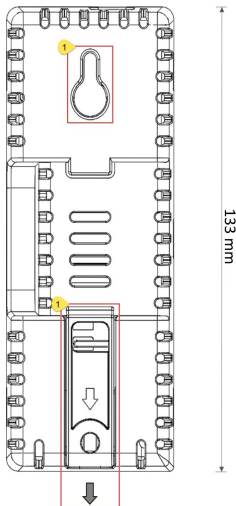


Wall mounting position

#	Description
1	Wall mounting bracket (suggested screw dimensions 4,2 x 32 mm)

To ensure a proper ventilation of the equipment, a free gap of at least 2 cm must be respected in front of all upper & lower ventilation openings of the unit.

A free gap of at least 1 cm must be respected on each side of the unit.

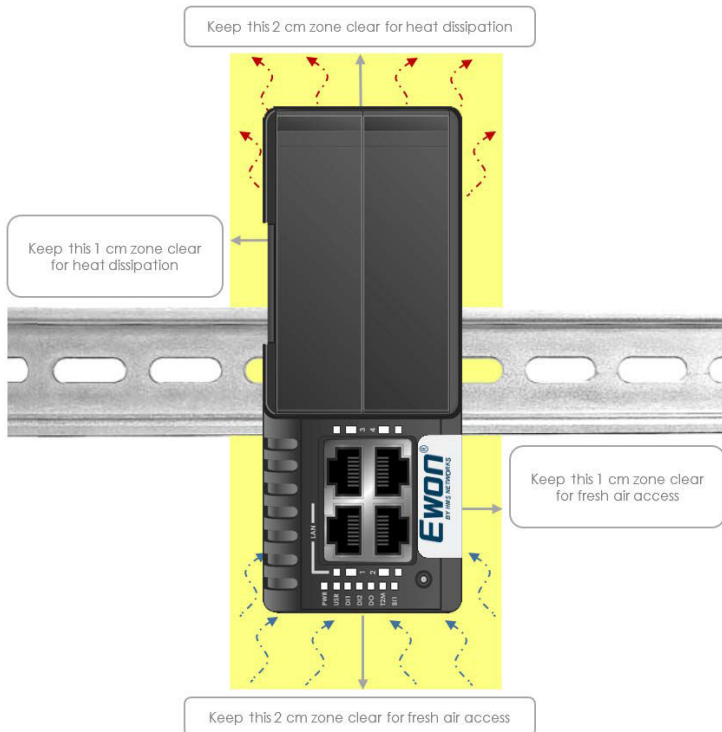

Free gap surrounding the Ewon for heat dissipation.

3.8.4. Earthing

Earthing the Ewon is necessary to eliminate unwanted transients and to conform to the EMC requirements. Therefore, a functional earth (FE) terminal is available on the main connector as shown in [Specification of the External Power Supply \(page 33\)](#).

Connect this terminal directly to allow impedance ground. Shielded cables have to be used for Ethernet and USB to comply with the EMC requirements.

3.8.5. Environmental Limits

The equipment will operate properly within the following environmental limits provided it is mounted according to [Mounting Recommendations \(page 6\)](#).

Characteristic	Value
Operating temperature	-25° to +60°C
Storage temperature	-40° to +70°C
Relative humidity	10 to 95% non-condensing
Operating altitude	Up to maximum 2000m
Storage altitude	Up to maximum 3000m
Mounting	Latch for DIN rail EN50022-compliant

3.8.6. Labelling Information


The OEM User Manual (for integrators) must provide clear instructions, to the OEM, explaining the labeling requirements, options and OEM User Manual instructions that are required.

The host OEM User Manuel (Ewon's manual) must contain clear instructions on how end users can find and/or access the module and the FCC ID.

4. Hardware Description

4.1. Label

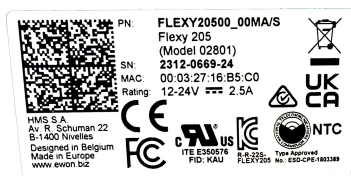

The identification label of the is placed on the right hand side of the housing. The different parts of the label are described below:



Label	Definition
PN	Part Number (see syntax in the table below)
SN	Serial Number YYWW-SSSS-PP YY = 2 last digits of production year WW = production week number SSSS = Sequential production number PP = Product Code
MAC	MAC address of the Ethernet adapter
Rating	Power supply requirements
Marks	CE, UL,... logos if applicable

Syntax of the Part Number:

FLEXY12233_44AA [suffix]			
Position(s)	Description	Acceptable values	
FLEXY	Name of the Ewon device model	Only Flexy (constant)	
1	Single figure Defines routing capabilities	2	M2M Router
22	Two figures Defines the type of the motherboard	05	4 configurable LAN/WAN Ethernet ports
33	Two figures Defines the primary software option	00	No primary software option
44	Two figures Defines the secondary software option	00	No secondary software option
AA	Two capital letters Defines the firmware language	MA	EN + FR + DE + IT
[suffix]= /S	Single capital letters Defines the model type	S	This suffix indicates compliance with the UL/IEC/EN 62368-1 standard.
[suffix]= H	Single capital letters Defines the model type	H	This suffix indicates compliance with the UL 121201, 9th Ed., and CSA C22.2 NO. 213-17, 3rd Ed., for usage in Hazardous Locations, Class 1, division 2.

Marks	
Marks	Description
	Conformité Européenne or European Conformity (EC)
	UL Recognized - Underwriters Laboratories

4.2. Mechanical Dimensions

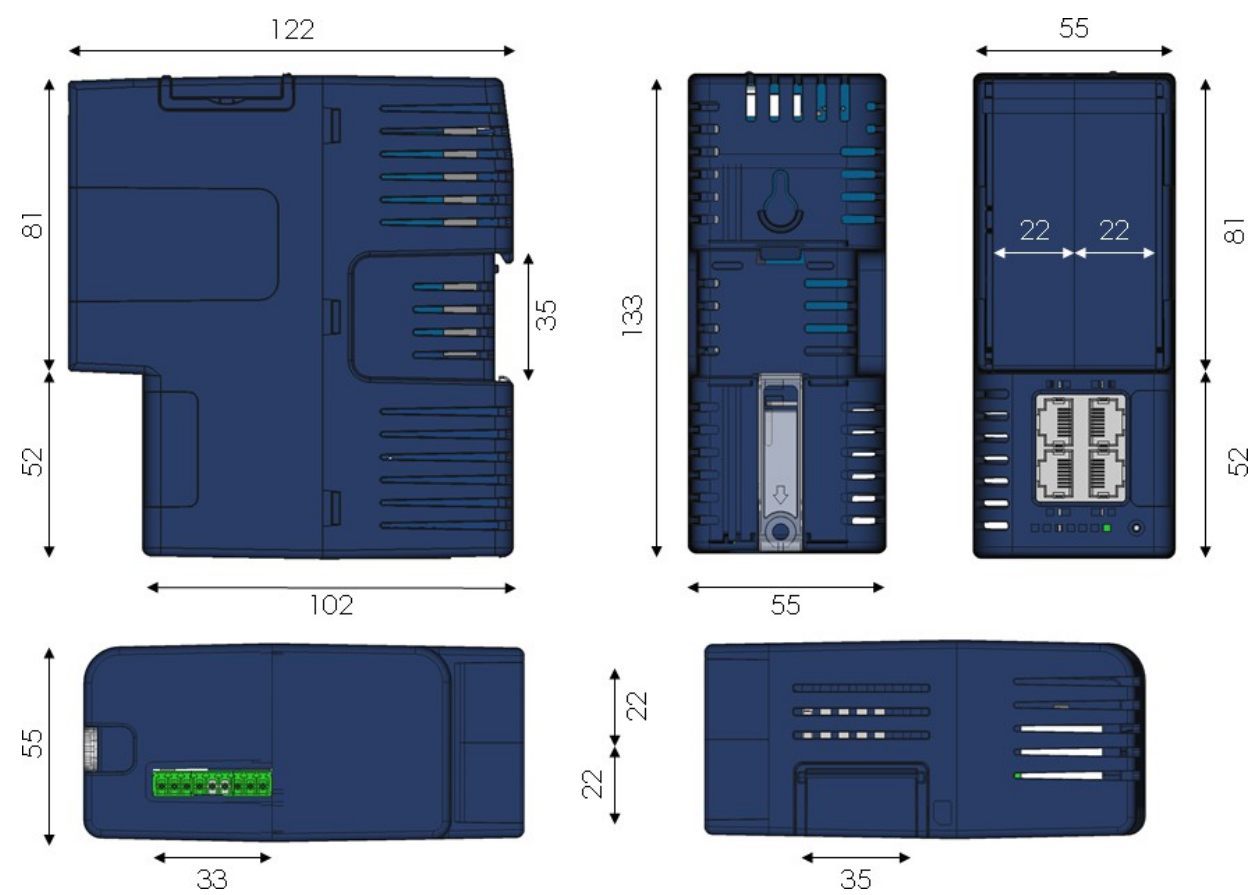


Figure 2. Mechanical Dimensions

In the above picture:

- **Unit:** Dimensions are in millimeters (mm).
- **Accuracy:** Suited only for implementation drawings (rounded @ full mm).

Shaded areas show provisions of empty space that should be considered in the implementation arrangement.

The provision of empty space in front of the slot fillers is spared for the connectors of extension cards. Even if the application requires no extension card(s), it is good practice to plan the free space anyhow, in case an extension card is inserted later on.

4.3. Physical Interface

This section addresses the interface that represents the . The items numbered in the image below are explained subsequently in separate paragraphs.

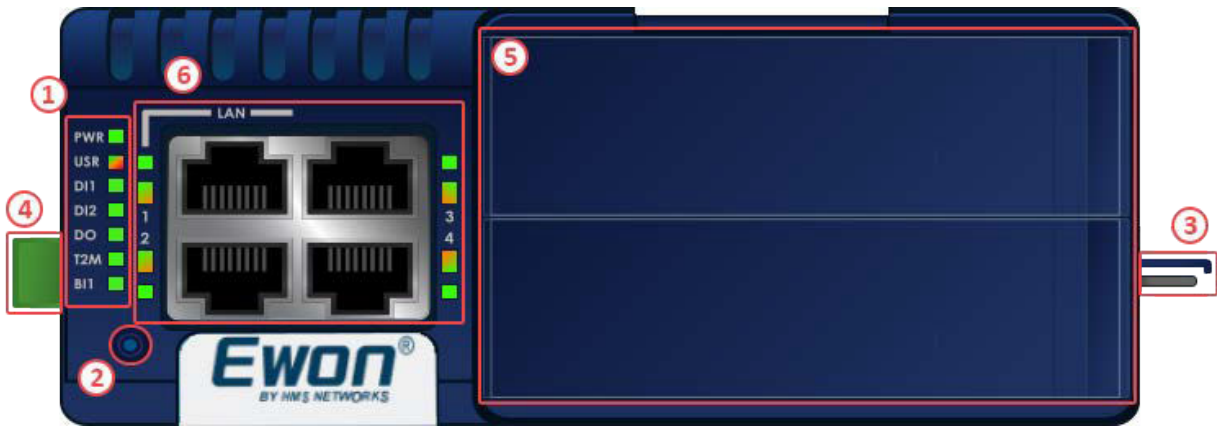


Figure 3. Base Unit Interface

1	LED panel.
2	RESET button - BI1.
3	SD card slot.
4	Main connector. Used to connect the power supply and the digital I/O.
5	2 slots fillers. Can be removed and replaced by extension cards.
6	Main board communication interfaces: 4 Ethernet Ports.

4.3.1. LED Panel

The LED panel displays the system status and is located bottom to the 4 Ethernet ports. The following table explains the common LEDs of all base units.



Label	Definition
PWR	Power Steady green = unit is powered on.
USR	User Blinking green slowly = Unit is ok Red pattern = special attention required.
DI1	Digital IN 1 Green = ON : Signal on Input 1 detected.
DI2	Digital IN 2 Green = ON : Signal on Input 2 detected.
DO	Digital output Green = ON : Signal on Output detected.
T2M	Talk2m Green = ON : Talk2m VPN connection established.
BI1	Button BI1 input Steady green = reset button is being pressed.

Figure 4. LED Panel Example of a Ewon® Flexy

4.3.2. Reset Button

The reset button allows the reset of the Ewon® Flexy partially (Reset Level 1) or completely (Reset Level 2). For the reset procedures check [Resetting the Ewon® Flexy \(page 31\)](#).

4.3.3. SD Card Slot

The SD card can be used for two purposes:

- Easy Commissioning: Configure an and perform actions such as a firmware upgrade / downgrade, recovery, restore a backup, Talk2m account integration, ...
- Extended User Memory: Named as the EUM card, it increases the user memory capacity of the .

The SD card slot is based on the Push-Push mechanism:

- Push the SD card down the slot until the mechanism clicks. As the click sound is heard, the SD card is now locked inside the card holder.
- Push on the SD card until it clicks again to retrieve it from the .

For more information on each of the possibilities offered with the SD card, easy commissioning or EUM, please refer to the [Related Documents \(page 1\)](#) chapter.

4.3.4. Main Connector of

The is powered via its main connector using a male connector (a mating female connector with screw terminals is provided in the box of the Ewon device).

For details see [Main Connector \(page 33\)](#) in appendix.

4.3.5. Two Slots for Extensions

The slot fillers can be removed to add extension cards. A general overview of the available extension cards is available in the [Listing of Extension Cards \(page 39\)](#) appendix section.

It is recommended to never leave a slot empty. Either a slot filler or an extension card should always be inserted in the .

4.3.6. LAN / WAN Ethernet ports

The LAN / WAN interface consists of a 4 auto-sense Ethernet ports (10/100 Mbps). Auto-sense means that both UTP Class 5 direct and crossed cables with RJ45 terminations at both ends can be used. Default parameters see [Factory Default IP Settings \(page 27\)](#).



Figure 5. Interface of the Ewon® Flexy

However, the minimum required regarding the Ethernet cable type is Cat.5 with RJ45 connectors.

Table 1. LED Interface

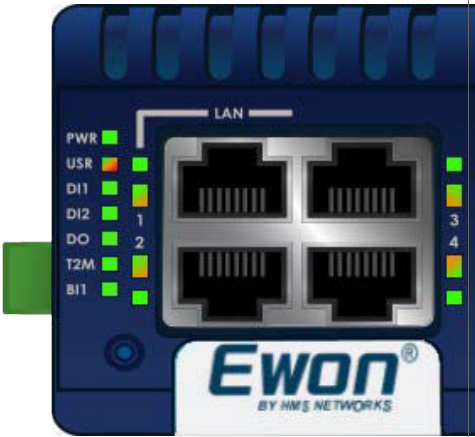
Label	Definition	Environment
1	Big rectangle	
	Small Square	
	Green = LAN port Orange = WAN port	
	Ethernet activity on port 1 Green steady = Ethernet link OK Green flashing = Ethernet traffic (Rx and Tx)	
2	Ethernet activity on port 2 (same as above)	
3	Ethernet activity on port 3 (same as above)	
4	Ethernet activity on port 4 (same as above)	

Figure 6. LED Panel of the Ewon® Flexy

5. Extension Cards

Picture	Reference & name	Slot compatibility	Maximum supported	Installation Guide
	FLB 3208 - Cellular 4G NA extension card 2 Serial-Ports	●●○○	2	IG-0016-00
	FLX 3101 Ethernet 10/100	●●●●	1	IG-0017-00
	FLX 3402 8DI-4AI-2DO	●●●●	4	IG-0030-00
	FLB 320A 4G EU	○○●●	1	IG-0034-00

Picture	Reference & name	Slot compatibility	Maximum supported	Installation Guide
	FLB 3203 4G Verizon	○○●●	1	IG-0025-00
	FLB 3208 4G NA	FLB 3208 4G NA	1	IG-0033-00
	FLB 3209 4G APAC	○○●●	1	IG-0032-00
	FLB 3601 USB	○○●●	1	IG-0024-00

Picture	Reference & name	Slot compatibility	Maximum supported	Installation Guide
	FLC 3701 MPI	○○○○	1	IG-0029-00
	FLB 3271 WiFi	○○●●	1	IG-0020-00

**IMPORTANT**

As explained in [Software Compatibility of Multiple Cards Combination \(page 25\)](#), the number of cards of the same type supported by the firmware is indicated in this table.

5.1. Slot Compatibility

The reference code of the extension cards includes a letter that defines their compatibility with a certain type of slots. In the case of the :

- FLA xxxx, FLB xxxx, FLX xxxx- Designates cards that fit into either slots
- FLCxxxx - Designates cards that fit into the only (not compatibility with the Ewon Flexy 10x or 20x).

**NOTICE**

The Type A, Type B or Type X slots are important for Flexy 10x and 20x. The is compatible with all extension cards and doesn't rely on the reference code of the extension cards to position them.

In addition to the card reference, each type of extension card bears a visual compatibility symbol on its front panel.

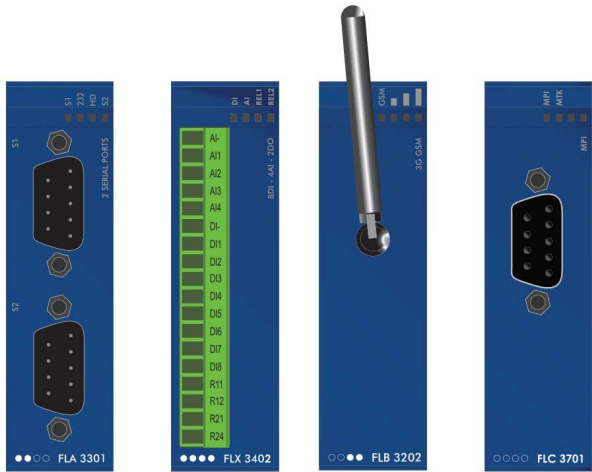



Figure 7. Slot Compatibility Markings


Indication	Design	Location
1	●●○○	Any slot - Type A
2	●●●●	Any slot - Type X
3	○○●●	Any slot - Type B
4	○○○○	Any slot - Type C

5.2. Extension Card Insertion

**CAUTION**
Wait 30 seconds after turning off the equipment before inserting (or removing) an extension card in order to avoid possible damage to the and the extension cards.

Remove the slot filler of the location the new card will be inserted. To do this, press on both ends of the cover, note that the hooks are off-centered.

Insert the extension card carefully and slide it down until the hook clicks. Make sure the card is completely inserted.

**WARNING**
DO NOT insist if a resistance is felt when trying to insert the card.

**TIP**

Hooks to be pressed are off-centered – press while pulling upwards.

Figure 8. Slot Removal

Boot the unit for the inserted extension cards to be detected.

As explained in [Detected Cards Displayed in the System Page \(page 29\)](#), the web interface of the has a diagnostic page showing the extension cards in their order of detection (from left to right).

5.3. Powering On the with its Extension Cards

The normal boot sequence of the takes approximately 25 seconds to complete. During this process, all LEDs go ON for a while except **BI1** as long as the RESET button is not pressed and the WAN / LAN Ethernet ports.

If the RESET button was pressed, the **USR** LED will be orange for a little time.

As soon as the boot process is finished and the unit is ready to be used, the **USR** LED blinks green slowly.

The extension card types are detected one slot after the other during the boot sequence and are automatically installed from a system standpoint.

5.4. Multiple Extension Cards

5.4.1. Detection Order

The boot sequence of the includes an automated detection of the inserted extension cards. This detection is done sequentially, one slot after the other, starting from the left to the right (when holding the with its logo on the right side).

5.4.2. Software Compatibility of Multiple Cards Combination

The allows the insertion of multiple extension cards of the same type. Some configurations including multiple extension cards, even if mechanically acceptable, are not supported by the embedded software. Cards in excess are ignored during the automated detection process which means that the and its running extension cards will operate normally.

The ignored card(s) will appear in the **Diagnostic > Status > System Info > System** but they will not be functional.

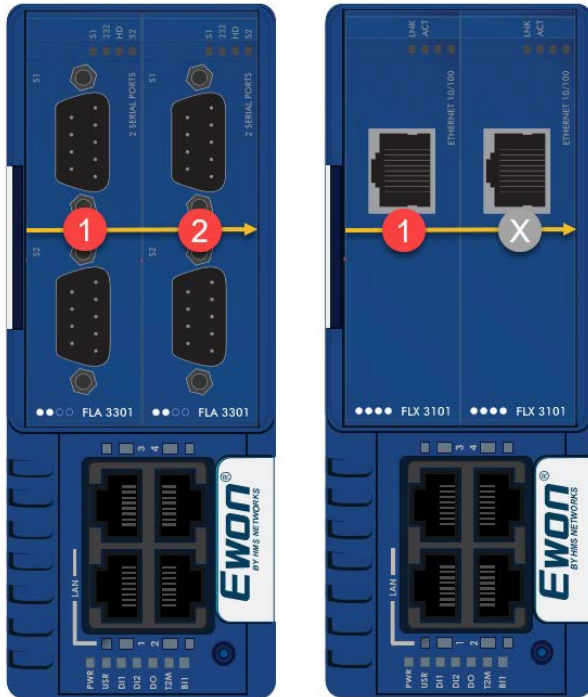


Figure 9. Order of the Extension Cards

The picture above shows an example of a configuration that would be OK mechanically and power wise but would not be supported by the firmware.

During the boot process, the first 2 serial port extension cards are detected and both can be used. In case of 2 single Ethernet cards, these 2 cards are also detected but the second single Ethernet card is not supported by the firmware and so it cannot be used. The presence of this “ignored” card in the does not alter the operation of the itself nor does it alter its “accepted” extension cards.

5.5. Ethernet Extension Card - FLX 3101

By default and if there is no extension card available in the , the 4 Ethernet ports will be distributed as:

- Ports #1, #2 and #3 are set as LAN port.
- Port #4 is set as a WAN port.

If a FLX 3101 (single Ethernet port) extension card is inserted, the will automatically switch all its ports to LAN leaving the Ethernet port of the extension card as the only WAN port able to connect to the Internet.

**NOTICE**

This switch to 4 LAN ports occurs only when an FLX 3101 is inserted.

This doesn't happen if a WiFi (FLB 3271) or a 3G / 4G (FLB 3202 / 3203 / 320A / 3208) extension cards are plugged-in.

6. IP Address & Access to the Web Configuration

6.1. Factory Default IP Settings

Characteristics	Values
LAN IP address	10.0.0.53
LAN subnet mask	255.255.255.0
Gateway	0.0.0.0



NOTICE

The WAN IP address is set by default in DHCP mode.

6.2. Powering On

Power the unit on and wait approximately 25 seconds until the boot process is completed. After a successful boot process the **USR** LED is blinking green slowly.

If the **USR** LED is blinking red according to a given pattern, it indicates an interruption of the boot process due to a problem. The most frequent issue is:

- A duplicate IP address was detected on the LAN network: **USR** LED blinking pattern is red 1x short, 1x long

For other LED patterns in case of error, please refer to General Reference Guide from the [Related Document \(page 1\)](#) chapter.

6.3. Connecting to the LAN IP Address

Establish the first communication with the by using Ewon companion tool **Ebuddy** which can be downloaded from www.ewon.biz/support.

Connect the LAN port #1 of the to the computer point-to-point or through a network provided the default IP address of the will not conflict with another connected device.

Start the Ebuddy application. The application scans through the Ethernet adapter network and retrieves the connected Ewon devices displaying the IP address, subnet mask and serial number.

The utility also allows the modification of the default IP address without being necessarily in the same network range. To do so, follow this process:

1. Start the Ebuddy utility.
Optional: Highlight the row representing the device which IP address needs to be modified.
2. Click on the button "**Set IP**" from the top bar menu or press F2 keyboard shortcut.
3. If step 2 has been fulfilled, the serial number of the selected device appears in the new popup.
If not, indicate the serial number of the device that needs to be modified.
4. Click **Next**.
5. Indicate the new IP address and its subnet mask.
By clicking **Next**, Ebuddy sends the command to the device to change its IP address and to reboot.
6. Wait until the reboot has ended to reach the on its new IP address.

6.4. Web Interface

While the computer is connected to a LAN port of the , open an Internet browser and reach the web server which URL is the LAN IP address of the (default is 10.0.0.53).

Another way to access the web panel of the is by using Ebuddy with its EZ DHCP feature.


For more info, refer to Ebuddy from the [Related Documents \(page 1\)](#).

Before beginning the configuration of the , an authentication is required.



WARNING

For Ewon® Flexy devices produced after **10th of September 2024** and starting from the **serial number 2427-0908-24**, default login is "*adm*" and password is the unique password you can find on the label sticker on the right side of the device.

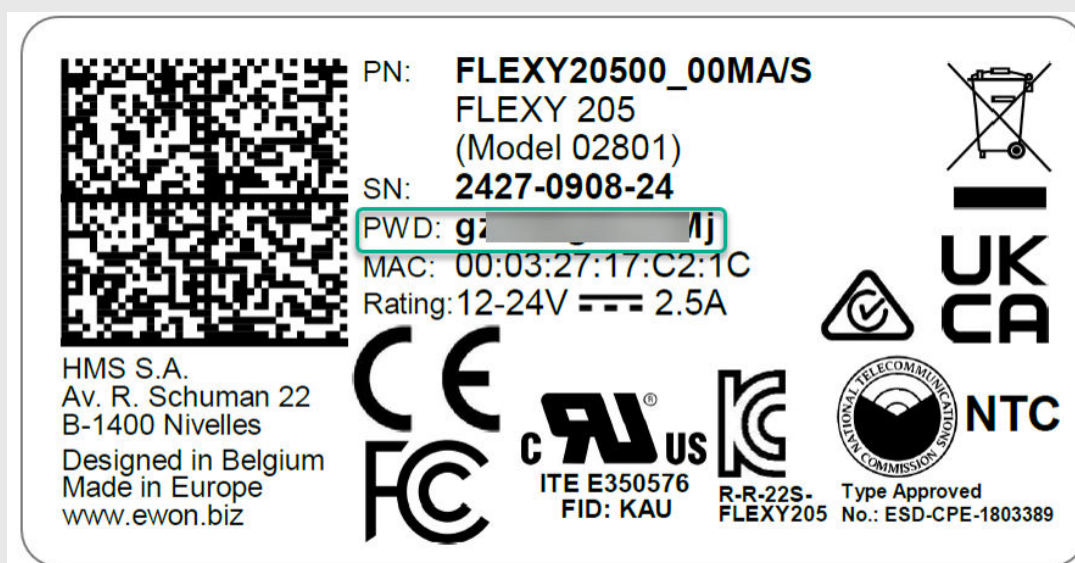

CAUTION

If you **downgrade** a Ewon® Flexy device running under the **firmware 14.9s3**, to an older firmware version, the **old password policy will be applied**, which means that default login and password will be both *adm*.



IMPORTANT

For Ewon® Flexy devices produced before the **10th of September 2024** or before the **serial number 2427-0908-24**, default login and password are both *adm*. For security reasons, default password must be modified.

To change the password, go to **Setup > Users** and double click on the *adm* entry to edit its parameters. Enter the new password twice and click **Save**.

At the very first boot of the or after a reset level 2 and after successfully logging in, an interface language selection will be proposed.

A configuration wizard will be proposed afterwards which sets the configuration of the but also the connection to the Talk2m environment.

On Ewon website, a [Start Up Guide](#) can be found which helps in the configuration of the .

6.4.1. Detected Cards Displayed in the System Page

The **System** page allows to check the status of the system including detected extension cards.

To access the system status summary, click on **Diagnostic > Status > System Info > System**.

6.5. Installation and Firmware Update for Cybersecurity Requirements



WARNING

Mandatory Cybersecurity Requirements:

To comply with the latest mandatory cybersecurity requirements, please update your Ewon® Flexy device during installation with the latest available firmware. If your device was running a firmware below 15.0S1, then Reset Level 2 is required after firmware update.

Read about the procedure in the following article [How to update the firmware of an Ewon Flexy?](#).

Please ensure that physical access protection to the Ewon device is guaranteed and allow only authorized users to connect to the LAN network.

Additionally, use the available access rights levels on both the Ewon device and in Talk2m to enforce the principle of least privilege. Make sure strong and unique passwords are used for the Ewon web configuration pages.



IMPORTANT

If you are performing a firmware upgrade on a new device, it is Ewon® Flexy important to perform a reset level 2 (factory settings) on your device so the cybersecurity settings for firmware 15.0s1 and above will be applied on your new devices.

There are 2 possible ways to update the firmware of an Ewon® Flexy:

1. Using the Ebuddy update feature
2. Firmware updates files (.edf) by FTP or USB/SD

6.6. Network Interfaces and Services (Factory Default State)

The table below outlines the network interfaces available on the Ewon device and the associated services in their factory default configuration.

1. LAN Network interface

The LAN interface connects to your PLC and HMI, enabling remote access and polling of device registers. To meet cybersecurity requirements, ensure physical access to the Ewon device is restricted, and allow only authorized users to connect through the LAN network.

Network Interface	Service	Port (default)	Default Status
Ethernet LAN	ICMP	N/A	Enabled
Ethernet LAN	Web Configuration Interface (HTTP)	TCP 80	Enabled
Ethernet LAN	2nd Web Configuration Interface (HTTP)	TCP 81	Enabled
Ethernet LAN	Device discovery and configuration (Ebuddy)	UDP 1507	Enabled
Ethernet LAN	FTP Server	TCP 21	Disabled
Ethernet LAN	NTP relay	UDP 123	Disabled
Ethernet LAN	DHCP server (in advanced settings only)	UDP 67	Disabled

2. WAN Network interface

By default, no services are enabled on the WAN interface. Only outgoing connections are used to establish remote access.

Talk2m Connectivity:

- a. Outbound ports: TCP 443, UDP 1194
- b. For more details, refer to: [Talk2m Connectivity Requirements](#)



NOTE

The WAN interface depends on the inserted Flexy Extension cards and the configured Internet communication method.

It can be one of the following:

- Ethernet WAN (switch port 4 by default)
- WiFi modem connection (WiFi Internet connection)
- Cellular modem connection (4G Internet connection)

3. VPN Network Interface

The VPN interface becomes available when a secure VPN connection is established for remote access. When using Talk2m, this interface is accessible only to identified and authorized users of the associated Talk2m account.

Network Interface	Services	Port (default)	Default Status
VPN Connection	ICMP	N/A	Enabled
VPN Connection	Web Configuration Interface (HTTP)	TCP 80	Enabled
VPN Connection	2nd Web Configuration Interface (HTTP)	TCP 81	Enabled
VPN Connection	FTP Server	TCP 21	Disabled
VPN Connection	USB over IP	TCP 6000 TCP 5473	Disabled

7. Resetting the

The reset button **BI1** is located at the bottom right of the (see [Reset Button \(page 18\)](#) chapter). The reset function of this button is active only if pressed while powering on. The features two type of reset levels. A table with the impacted configuration zones per reset level can be found in [Reset Impact Matrix \(page 32\)](#).

7.1. Normal Boot Sequence

The normal boot sequence of the takes approximately 25 seconds to complete. During this process, all LEDs of the left row go ON for a while, except **BI1** as long as the RESET button is not pressed and the WAN / LAN Ethernet ports.

If the RESET button was pressed, the **USR** LED will be orange for a little time.

As soon as the boot process is finished and the unit is ready to be used, the **USR** LED blinks green slowly.

7.2. First Level Reset (User Reset)

The first level reset consists in formatting only the **user files** part of the non volatile memory. This type of reset does not modify the communication parameters of the .

How to generate a first level reset:

1. Power the unit *OFF and ON again*.
2. **Immediately press and maintain** the reset button. The LED labeled **BI1** turns ON.
3. Wait approximately 30 seconds until the **USR** LED blinks red 1x per second.
4. Immediately release the button. The LED labeled **BI1** turns OFF. If the button keeps being pressed at this point, the second level reset will be engaged.
5. Wait approximately 30 seconds until the reset procedure is completed.
6. The restarts automatically and the unit is ready to be used, the **USR** LED blinks green slowly.

7.3. Second Level Reset (Factory Reset)

This second level reset formats all non volatile memories and erases the back to its factory defaults.

This operation consists in 3 steps:

- Erasing of all non volatile memories, including all COM parameters and IP addresses
- Full hardware auto test with result shown by the **USR** LED
- Return to factory configuration (default one)

How to generate a second level reset:

1. Power the unit OFF and ON again
2. *Immediately press and maintain* the reset button. The LED labeled **BI1** turns ON
3. Wait approximately 35 seconds until the **USR** LED remains red steady
4. When this state is reached, release the button. The LED labeled **BI1** turns OFF
5. It takes no longer than 5 seconds to complete.
6. Check if the auto test is successful, the **USR** LED blinks red following a pattern of 200ms ON and 1,5 sec OFF. The does not restart in normal mode by itself and remains in this diagnose mode.
7. Power the OFF and ON again to reboot the unit in normal mode.
As described before, the returns to its default COM parameters and factory IP addresses (default LAN IP: 10.0.0.53) after this second level reset is performed.

If a different pattern than the successful auto test one is displayed then this pattern reflects an issue.

The pattern starts with 200ms ON (beginning of the pattern) followed by OFF and a certain number of times 1 sec ON which allows to identify the nature of the detected problem. Please write down the observed pattern and contact the local distributor referring to the pattern error.

7.4. Reset Impact Matrix

	Erased or Reset	Preserved
Impact Reset Level 1 User Reset	User(s)	LAN IP address + mask
	<i>adm</i> password (see Web Interface (page 28) section)	Internet access
	Tags	Language settings
	IO Server config	COM settings (modem, etc)
	Gateway config	Talk2m config + key
	Ewon Identification	Proxy configuration
	User Web site	Memory configuration
	User Scripts	
	\$dtPal Data Type Privacy Asset Logs	
Impact Reset Level 2 Factory Reset	LAN IP address + mask	Nothing
	Internet access	
	Language settings	
	COM settings (modem, etc)	
	Talk2m config + key	
	Proxy configuration	
	Memory configuration	
	User(s)	
	<i>adm</i> password (see Web Interface (page 28) section)	
	Tags	
	IO Server config	
	Gateway config	
	Ewon Identification	
	User Web site	
	User Scripts	
	\$dtPal Data Type Privacy Asset Logs	


Appendix A. Appendix

1. Connector Pinout & Related Specifications


1.1. Main Connector

As shown in the below picture, the female mating connector is labeled with the appropriate symbols.

Characteristic	Value
Connector type	MINICONNEC MC model Type MC 1.5 / 9–ST-3.5 Pitch = 3.50mm 9-pin female
Maximal tightening torque	0.25Nm Note: In the absence of a torque wrench, a soft manual tightening is sufficient

PIN	ICON	ID	Description
1	O ₋	DO_COM	Output signal (0V ground) connected to the emitter of the MOSFET transistor.
2	O	DO	Output signal connected to the drain of the MOSFET transistor.
3	O ₊	DO_VDC	Common of the external predrive power supply (between +12 et +24 VDC)
4	I ₋	DI_COM	Ground of the input (isolated)
5	I1	DI1	Input signal 1
6	I2	DI2	Input signal 2
7	+	Power in VDD +	Between +12 and +24 VDC
8	-	Power in GND —	0V
9		Functional earth	

Connector pinout:

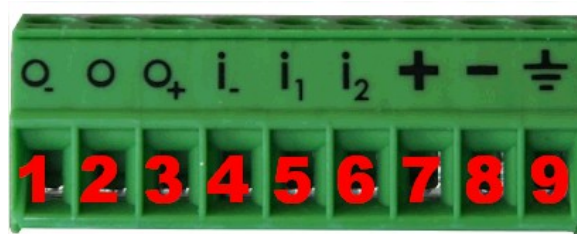

1.2. Specification of the External Power Supply

- EUT should be supplied from external, separately provided power supply 12-24Vdc, 30W min., certified for 70°C and for altitudes up to 2000m.
- Power supply should be separately certified according UL/IEC 62368-1 with ES1, PS2 output or separately certified according to IEC/UL60950-1 with LPS output or Class2 per NEC

For more information check the [Certifications](#) section of our website

Characteristic	Value
Power supply voltage	External 12-24 VDC +/- 20%
Max. input power	30W max.
Internal voltage protection	max 30V
Input protection	Protected against polarity inversion

Suggested power supply:

- SIEMENS SITOP logo power 24V 2.5A 60W - Siemens order ref: 6EP1332-1SH43
- Equivalents of the above on the market

1.3. Digital Output & Digital Inputs

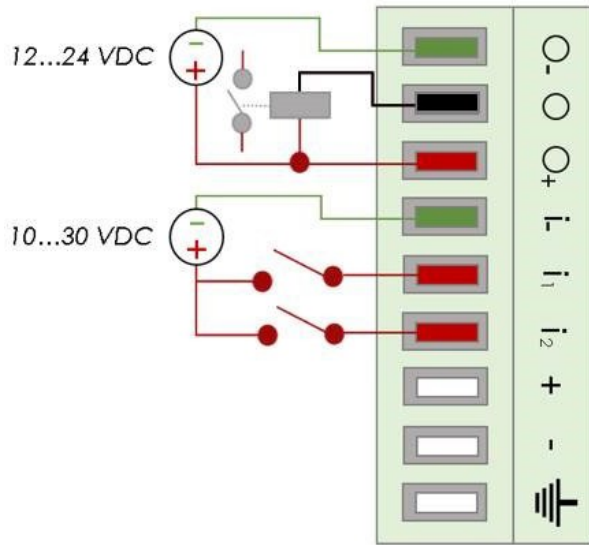


Figure A.1. Current scheme of the main connector

Characteristic	Value
Type of digital output ⁽²⁾	Open drain MOSFET
Maximum current (ext,source)	200 mA
Isolation (both DI & DO)	1.5 kV
DI voltage range	0 to 30 VDC
DI protection	33 VDC Max
DI max frequency	10Hz or 100ms
DI OFF state — input voltage range	0 to 5 VDC
DI ON state — input voltage range	10 to 30 VDC
DI ON state — current range	From 3,8 mA @ 12 VDC to 8,2 mA @ 24 VDC

⁽²⁾ During the starting boot process, the DO will be switched ON for a short time (2 seconds)

The **Digital Output** is activated by an open drain MOSFET transistor driven by an optocoupler. The maximum current flow inside this transistor has a value above the one specified in the Ewon, in order to cope with the switching power losses.

The transistor used is in an open drain type with predrive. This means the relay power supply has to be supplied from an external source to the predrive electronics.


The diagram below shows the external wiring needed for proper operation of the digital output. A relay has been chosen for this sample application but any load within the specifications can be used instead.



NOTICE

This is a sink only output to ground (the transistor acts as a switch ground).

Figure A.2. External wiring for the Digital Output

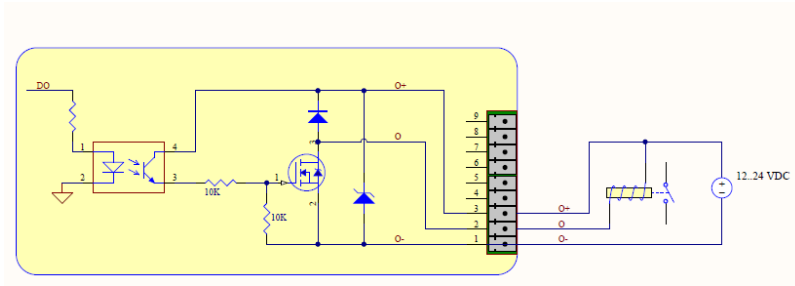

2. Ewon® Flexy Products Overview

2.1. Extension Cards

Picture	Reference & name	Slot compatibility	Maximum supported	Installation Guide
	FLB 3208 - Cellular 4G NA extension card 2 Serial-Ports	●●○○	2	IG-0016-00
	FLX 3101 Ethernet 10/100	●●●●	1	IG-0017-00
	FLX 3402 8DI-4AI-2DO	●●●●	4	IG-0030-00
	FLB 320A 4G EU	○○●●	1	IG-0034-00

Picture	Reference & name	Slot compatibility	Maximum supported	Installation Guide
	FLB 3203 4G Verizon	○○●●	1	IG-0025-00
	FLB 3208 4G NA	FLB 3208 4G NA	1	IG-0033-00
	FLB 3209 4G APAC	○○●●	1	IG-0032-00
	FLB 3601 USB	○○●●	1	IG-0024-00

Picture	Reference & name	Slot compatibility	Maximum supported	Installation Guide
	FLC 3701 MPI	○○○○	1	IG-0029-00
	FLB 3271 WiFi	○○●●	1	IG-0020-00




IMPORTANT
As explained in [Software Compatibility of Multiple Cards Combination \(page 25\)](#), the number of cards of the same type supported by the firmware is indicated in this table.

3. Ewon® Flexy Isolation Scheme

3.1. Base Unit

Ewon® Flexy	
Connector shielding	Earth connected
Ethernet signals	Isolated from DGND with a transformer

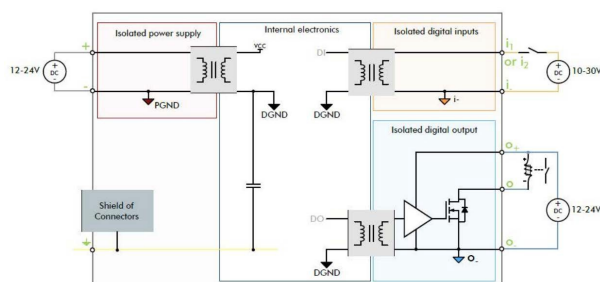**IMPORTANT**

Serial ports GND = DGND

Figure A.3. Isolation Scheme for the Base Unit

Based on the above picture:

- External and internal power supplies are isolated from each other (1.5kV).
- DI signals: isolated from DO signals, PGND and DGND (optocoupler).
- DO signals: isolated from DI signals, PGND and DGND (optocoupler).
- Earth is isolated from external and internal power supplies.

3.2. Listing of Extension Cards

FLB 320x – Cellular

DGND = GND RF from SMA connector

**IMPORTANT**

Avoid external connections between GND RF and Earth.

FLX 3101 – WAN Ethernet

Connector shielding: Earth connected

Ethernet signals: isolated from DGND with a transformer.

FLX 3271 – WiFi

DGND = GND RF from SMA connector.

**IMPORTANT**

Avoid external connections between GND RF and Earth.

FLX 340x – I/O

DO signals: isolated relays outputs.

DI signals: isolated from DGND (optocoupler).

AI signals: isolated from PGND only.



IMPORTANT

AI-GND = DGND

FLB 3208 - Cellular 4G NA extension card – Dual Serial Ports

Serial port signals: isolated from PGND only.

Connector shielding: connected to Earth.



IMPORTANT

Serial ports GND = DGND

FLC 3701 – MPI Port

MPI port signals: isolated from PGND only.

Connector shielding: connected to Earth.



IMPORTANT

MPI port GND = DGND

FLB 3601 – 3 USB Ports

USB signals: isolated from PGND only.

Connector shielding: connected to Earth.

Due to USB connector design, Earth-DGND isolation is limited to 500V when the USB extension card is inserted.



IMPORTANT

AI-GND = DGND